

TR

BBU® SAFETY 2 NOKTADAN BAĞLANTILI ÇENE BAĞI KURULUM TALİMATLARI

Bu çene kayışı ek kask tutuşu sağlar; ancak, çarpma sonrası veya düşme gibi her koşulda kaskı tutmayabilir.


Çene Bağını barete takma

1. Ön süspansiyon bağlantı yuvaları ve aksesuar yuvaları arasındaki kask kabuğunun ağzının altındaki kask deliklerini bulun (Şekil 1).
2. Çene kayışının uçlarındaki plastik kancaları, kanca kaskın içinden dışarıya bakacak şekilde yönlendirin (Şekil 2).
3. Plastik kancaların üzerindeki "U" şeklindeki tırnakları, kask deliğine iterek kask deliğine tam olarak oturtun (Şekil 2).
4. Diğer taraf için 1'den 3'e kadar olan adımları tekrarlayın (Şekil 3).
5. Çene altındaki kayışı ayarlayarak rahat bir oturuş sağlayın.

Çene Kayışını Süspansiyona Takma

1. Süspansiyon üzerinde, ön süspansiyon bağlantı yuvaları ile arka süspansiyon bağlantı yuvaları arasındaki yuvaları bulun (Şekil 4).
 2. Çene kayışındaki tırnağı süspansiyondaki yuvaya sıkıca sokun.
 3. Çene altındaki kayışı ayarlayarak rahat bir oturuş sağlayın.
- Daha fazla bilgi için www.bbusafety.com adresindeki web sitemizi ziyaret edin.


1

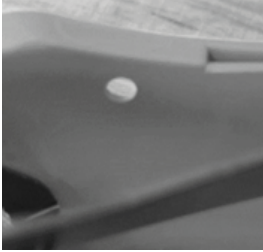

2



3

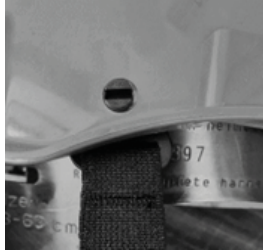

4



EN

BBU® SAFETY 2-PT CHINSTRAP

For use with BBU Hard Hats and Suspensions

INSTALLATION INSTRUCTIONS

This chinstrap provides additional helmet retention; however, it may not retain the helmet under all circumstances such as after an impact or during a fall.

Attaching the Chinstrap to the Helmet

1. Locate the helmet holes under the brim of the helmet shell between the front suspension attachment slots and accessory slots (Figure 1).
2. Orient the plastic hooks on the ends of the chinstrap so that the hook is facing outward from inside of the helmet (Figure 2).
3. Insert "U" shaped tabs on the plastic hooks into the helmet hole by pushing on the helmet hole hook is fully engaged in the helmet hole (Figure 2).
4. Repeat steps 1 thru 3 for the other side (Figure 3). NOTE: The chinstrap may be oriented for either left or right hand operation.
5. Obtain a comfortable fit by adjusting the strap under the chin.


Attaching the Chinstrap to the Suspension

NOTE: Use on 1-Touch and Staz-on Suspensions only.

1. Locate slots on the suspension between the front suspension attachment slots and back suspension attachment slots (Figure 4).
2. Tightly insert the tab on the chin strap into the slot on the suspension.
3. Obtain a comfortable fit by adjusting the strap under the chin.

For more information, visit our website at www.bbusafety.com


1

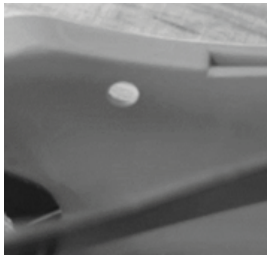

2



3

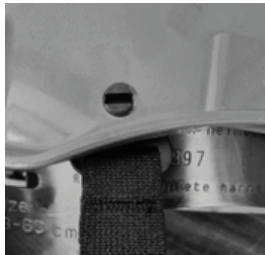

4

